VINE 3 E MODELS **QUICK START**

Hold ⏻ to turn **ON**. LED will turn on, the player will “beep” *once* and play automatically. Hold ⏻ again to turn **OFF**. LED will turn off, the player will “beep” *twice* and stop playing.

Problems with the player? Try pressing the Reset button.







**Vine 3 E1 Pictured*

TORCH*

RADIO*

RECORDER*

SPEED CONTROL*

VOLUME


PAUSE/ BOOKMARK/ PLAYER DETAILS

SECTIONS *(Click)*/ COLLECTIONS *(Press)*

SUBSECTIONS

FILES

FAST FORWARD/ REWIND

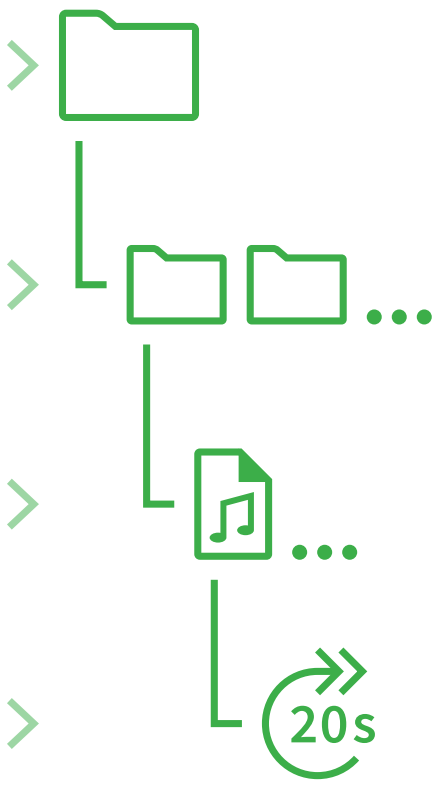

**Feature may be excluded on your player*

More info: **https://shemishgrove.solutions/vine-3-e-models**